


StormBoard™ Installation Instructions




STEPS 1 & 2

1. Starting at the #1 indicated on the face of the panel, begin fastening from the top of the panel to the bottom. (Refer to installation instructions on the front side of the panel for proper fastener spacing.)
2. Moving across the panel, attach fasteners at the top and bottom of the panel until you reach #2 (the next stud). It is important when using staples to fasten them in a parallel direction to the stud.

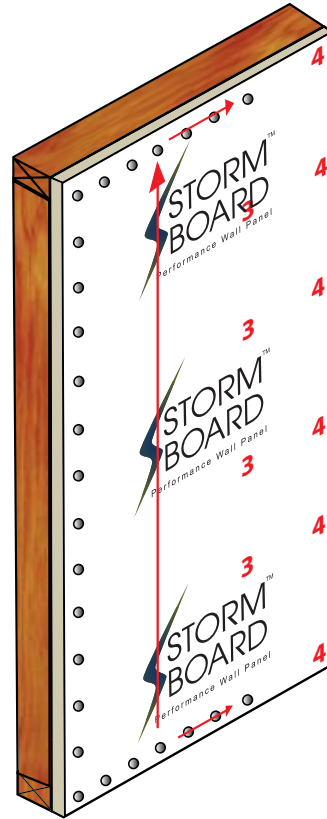

STEP 3

3. Proceed to fasten panel in numerical order repeating the procedure described in steps 1 and 2.

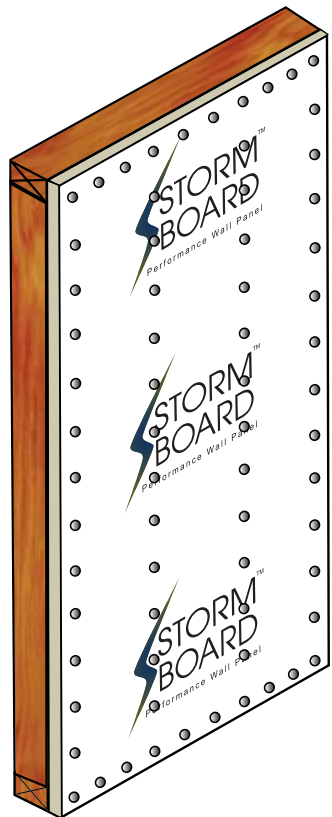

STEP 4

4. Continue until the Storm Board panel is properly secured to the frame.



STEP 5

5. In order to prevent gaps or rippling, it is important to move across from one side of the panel to the other when installing. **DO NOT fasten each of the four corners first.**